


TLC2: Capacitance Type Level Transmitter for Liquids



Instruction Manual

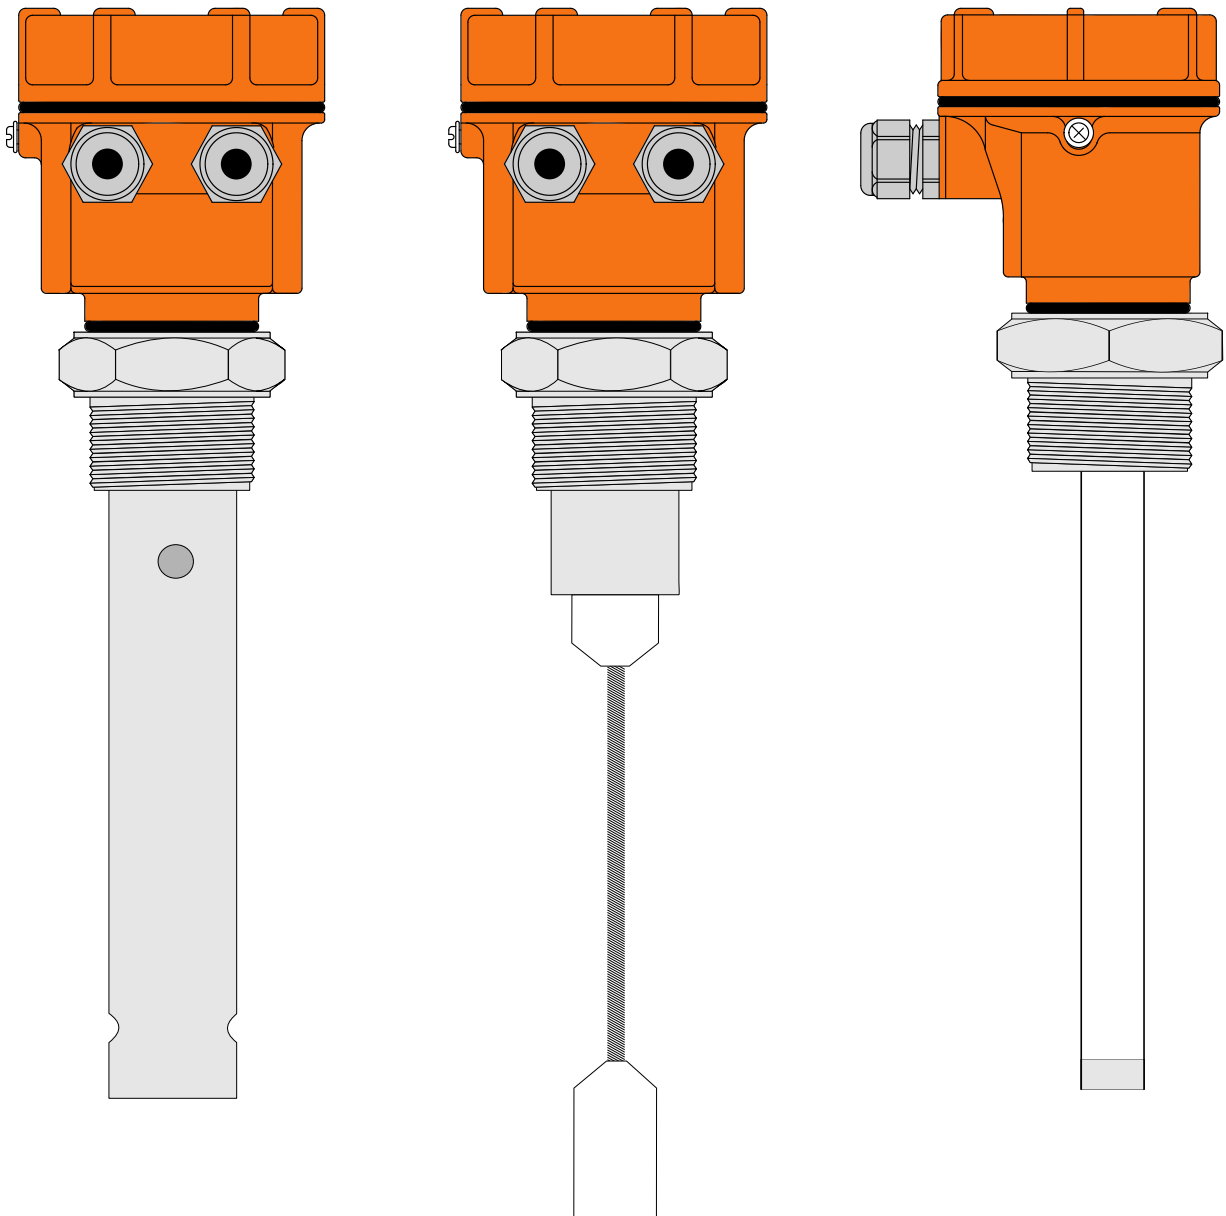

Trumen Technologies Pvt. Ltd.

39 Mangal Nagar, Behind Sai Ram Plaza, Near Rajiv Gandhi
Circle, AB Road, Indore, MP 452 001, India
Phone: +91-731-497 2065


Customer Support

Phone: +91-731-656 2425
email: sales@trumen.in
email: support@trumen.in
web: www.trumen.in

List of content

	Page
Operating Principle	1
Technical Specification	2
Do's and Don'ts	3
Troubleshooting	4
Maintenance & Spares	4
Annexure-1	
Introduction - TLC2 (Order code EILV/ERLV)	Page1
controls & indicators, connection terminals, configuration switches.....	Page1
Connection Diagrams TLC2 ((EILV/ERLV)	Page2
1. Grounding Load.....	Page2
2. Floating Load.....	Page2
3. Voltage Output with Grounded Load.....	Page2
Calibration TLC2 (EILV/ERLV)	Page3
Full Calibration (100% or 20mA Calibration).....	Page3
Trimming (100% or 20mA).....	Page3
Empty Calibration (0% or 4mA Calibration).....	Page3
Trimming (0% or 4mA).....	Page3
Damping (response time).....	Page3
Operation Matrix - TLC2 (EILV/ERLV)	Page4
Status LED Indications- TLC2 (EILV/ERLV)	Page5
Status LED Indications.....	Page5
Error Indications.....	Page5
Electrical Connections - TLC2 (EILV/ERLV)	Page6
Electrical Connections TLC2 (4-20mA) Loop Output.....	Page6
Electrical Connections TLC2 (1 to 5V) Voltage Output.....	Page6
Electrical Connections TLC2 (2 to 10V) Voltage Output.....	Page6
Annexure-2	
Introduction - TLC-SS+ICT 2R/3R (Order code EIR)	Page1
controls & indicators, connection terminals, configuration switches.....	Page1
Operation Matrix - TLC-SS (EIR)	Page2
Electrical Connections - TLC-SS (EIR)	Page3

Operating Principle

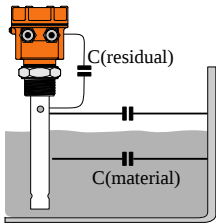

The probe forms a capacitance with the metallic tank-wall.
The capacitance is sum of three capacitance:-


$$C(\text{air}) = \epsilon(\text{air}) \times P \times (H-L)$$

$$C(\text{material}) = \epsilon(\text{material}) \times P \times L$$


$C(\text{residual})$ is due to device itself.

Where $\epsilon(\text{air})$ is the dielectric constant of air ≈ 1 .
 $\epsilon(\text{material})$ is dielectric constant of material.
 P is the constant of probe and installation, H is the active length of probe and L is the level of material.

Capacitance to level translation is performed with the aid of on-site calibration also called "wet-calibration".

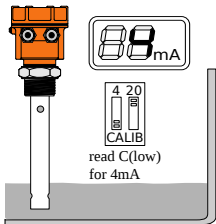


The device stores a low level capacitance as level for 4mA and high level capacitance as level for 20mA as defined by the user.

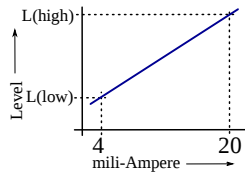

Using these values and following equation

$$L(\text{high}) L(\text{low}) = \frac{C(\text{high}) C(\text{low})}{P \times \{\epsilon(\text{material}) \epsilon(\text{air})\}}$$

device creates a chart of level to 4-20mA translation.

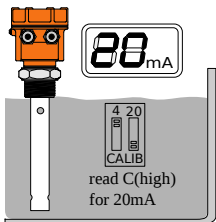

Technical Specification


Features

1. Fast Switching Response
2. High temperature endurable probes
3. Single sensor allows pump-control & multi-point switching
4. Easy calibration with or without material
5. Remote electronics with std 10 meters cable length
6. External indication LED available
7. Threaded , Flanged Mountings & TC
8. Electronic Inserts support all requirements
9. Ingress protection : IP 68/65 (as per IS-13947)
10. Ex-proof (Ex d T6 IP-66 IIC)
 - Flameproof as per IS/IEC 60079-1:2007
 - Weatherproof (IP-66) as per IS/IEC 60529:2001
 - Suitable for Gas Group : IIC
 - Suitable for Zone 1 & 2 atmospheres
12. Compact size
13. Rigid rod / flexible rope versions
14. No potentiometers - hassle free calibration compensation against material build-up

Applications

1. Free flowing homogeneous liquids like oil, raw water, WFI, DM/DI water etc
2. Suitable for top mounting
3. Process temperature max. 200°C
4. Process pressure max. 20 bar

Typical Mountings

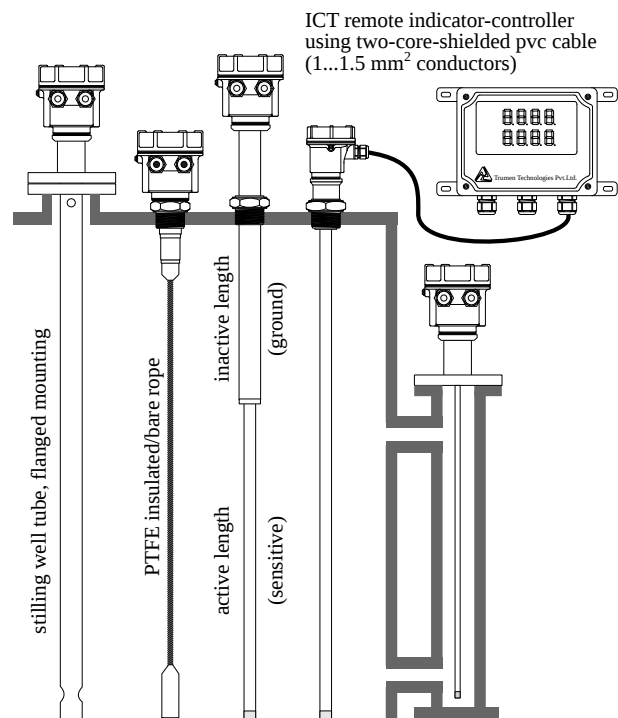


Specifications

EIL	Integral Electronics Two-wire Loop Powered
Supply	15-60 VDC
Output	4-20mA Loop powered, Error output 21mA/1-5V/2-10V
Loop Resistance	maximum 475 Ohm @ 24VDC supply
EIM	Integral Electronics Three/Four wire (negative common)
Supply	15-60 VDC
Interface/Output	ModBus-RTU / complementry 0-5V output suitable for > 20K Ohm
	Calibration/configuration available through ModBus as well as without using DIP switches
ICT specifications	ICT provides numerical LED indicator, control logic with relay outputs and re-transmission over galvanically isolated 4-20mA output
ICT Power Supply	SA : 80-260VAC, 50/60Hz for AC version SD : 16 to 32VDC for DC version
ICT RSx Relay Rating	SPDT 5 A each @ 24VDC or 220VAC (3 SPDT relays in IP65, max 6 SPDT relays in IP40 metal sheet enclosure)
ICT RKx Relay Rating	Contactors with 2NO/2NC rated at (1, 2 or 3 contactors, only in IP40 metal sheet enclosure)
ICT Isolated Loop Supply	24V +/- 4V Suitable for maximum 25mA load
ICT re-Transmission	4-20mA, Error@21mA, galvanically isolated loop powered section for use with either integrated ICT Isolated Loop Supply or any external DC supply within range 16 to 50VDC
ICT to TLC cable	Shielded 2 Core PVC cable with 1 to 1.5 mm ² conductors cross section
Min. Dielectric Constant	1.8 (non-hygroscopic)
Ambient Temp.	-20°C ... 70°C (-4°F ... 158°F)
Process Temp.	-20°C ... 100°C (-4°F ... 212°F)
Extended Process Temperature	PTFE Insulation: -30°C ... 250°C (-22°F ... 482°F) Ceramic Insulation: -30°C ... 600°C (-22°F ... 1,112°F) (extensions & heat sinks required)
Process Pressure	absolute / max. 15 bar (for ceramic insulation : 1 atm)
Wetted Parts	SS-304, SS-316, SS-316L, PTFE, part ceramic
Process Connection	TC / NPT / BSP 1", 1¼", 1½", 2" etc Flanged : ANSI/JIS/DIN/ASA/custom
Probe Insertion Length:	Rigid Rod : 50mm to 3,000mm Flexible Rope : 100mm to 20,000mm


Specifications are subject to change without prior notice

Do's and Don'ts

Installation Precaution

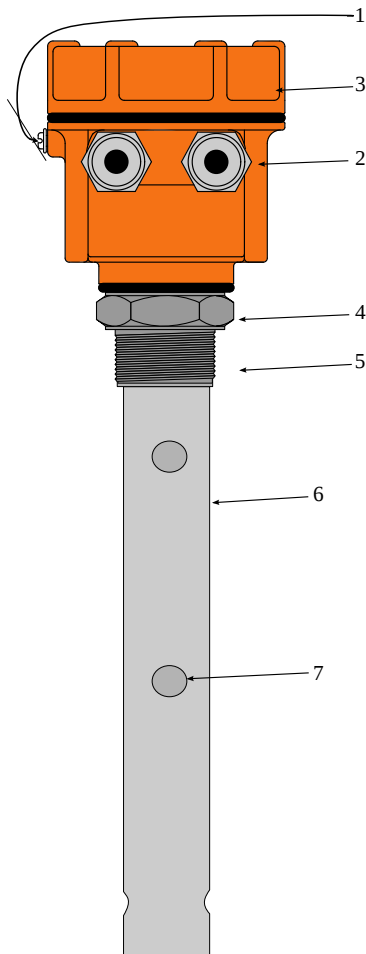

1. Always connect the "Earth" to the external "Earthing" screw
2. Tighten the cable entries & glands properly
3. Secure the top aluminium cover at its place properly once the electrical connections and other settings are completed
4. Always tighten the process connection using proper wrench never try to tight by rotating the aluminium housing
5. Make sure process connection is same as that in hopper/tank
6. Transmitter probe should never be:-
 - 6.1 Bent
 - 6.2 Held from thin part
 - 6.3 Cut or machined in any way
 - 6.4 Extended by welding or machining
7. Airvent hole should be clear from material and other dust particles

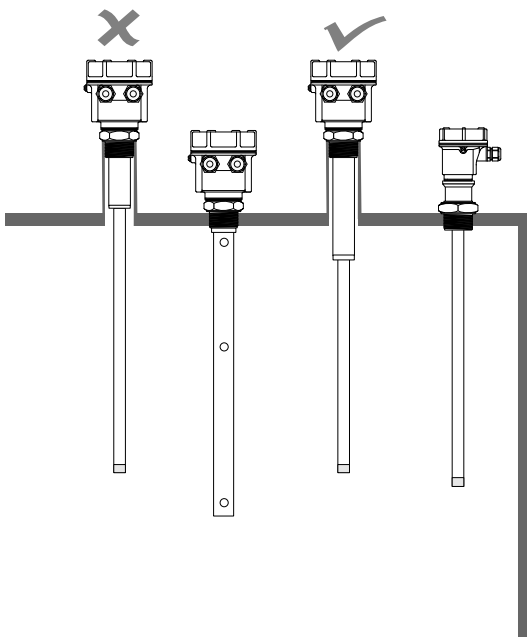


8. Nozzles should never be longer than the inactive / ground length
9. Never climb either by gripping or stepping over either the probe or its aluminium housing
10. Observe other safety precautions as required at the place of application


Troubleshooting

Indication	Probable cause	Work-around	Solution
All LEDs are OFF Even proper voltage is available	Power section of sensor electronic insert is failed		Sensor electronic insert is needed to be replaced.
After calibration current meter showing 21mA and status LED blinking fast continuously (Error)	Sense and earth part of probe are shorted Wrong calibration done at same level	Check if probe sense part are shorted with ground / PTFE insulation is break and conductive liquid are entered into it	Recalibrate at different level or replace the probe if shorted.
Current meter showing 21mA and status LED blinking rapidly rapidly by a short interval (Error) Current meter shows 20mA very early before material level reach at 100% level	High capacitance at probe Probe is too long for TLC2 in conductive liquid or water Wrong Position of Range switch no.5	Check probe length in conductive liquid / water if probe length is around 2500mm or above	Change the range from 1500 to 4200pF using switch no.5 Throw the switch no.5 to its ON position.
Calibration and settings are all OK but mA reading abruptly change or chatters continuously	Power supply carrying extra noise and capacitance amplifier picking the noise Ground is not properly connected	Make necessary arrangements to filter the noise in power-line before being fed to the device Provide an exclusive earthing to terminal# 3, capacitance enclosure earthing screw and capacitance probe process connection (device mounting screw or flange)	Device contains sufficient filtering of power supply noise inside, but sometimes external earth is needed to make filters sink the extra power supply noise back to earth, connect proper ground.


Maintenance and Spares




Top Cover

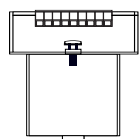


Electronic Insert
connection terminals
electronic insert fixing screw




4-way male connector for sensor (probe)
4-way female connector from sensor (probe)




Device enclosure
Cable glands



Thermal spacer (where needed)



Process connection

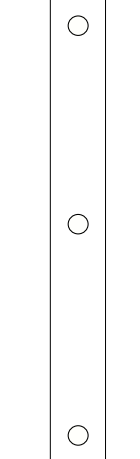

Stilling well tube

Shown on the left are various parts of TLC2 capacitance level switch. Separatable parts are

1. Electronic insert in short called 'electronics'
2. Probe + Enclosure + Cover + Glands collectively called 'mechanical'

For maintenance issues involving replacement of 'electronics', just a single fixing screw is needed to be released.

Lift the electronics slowly by holding electronics with one hand and mechanical with other, as wires are connected using rigid 4-way connectors to it.

Disconnect 4-way connector by holding electronics with one hand and female of connector by other hand, while the rest of the device is at rest.

Connect the new replaced sensor. 4-way connector is unidirectional and only connects in proper direction.


Set the electronics properly to its position.

Match the mounting screw hole of electronics with that of enclosure and fix the screw.

For mechanical issues please send the entire device back to Trumen.

Annexure-1

Introduction - TLC2 (EILV / ERLV)

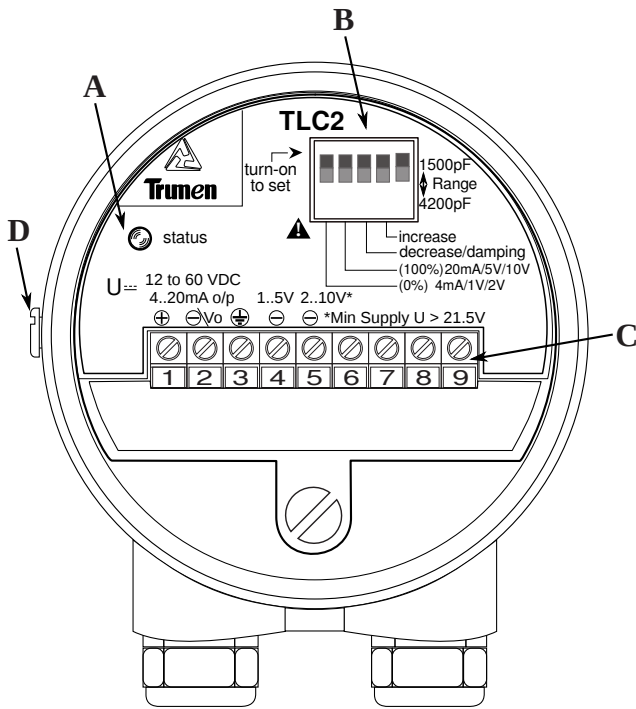


controls & indicators

- A Process indicating LED status
- B Calibration & configuration switches
- C Connecting terminals
- D External Earthing Terminal


connection terminals

- 1 + of DC of 4-20mA Loop
- 2 - of DC of 4-20mA Loop / Voltage Output +ve with reference of terminal 4 or 5
Supply:
12 to 60 VDC
- 3 Earth terminal for safety
- 4 Reference -ve for 1 to 5V Output at terminal no.2
- 5 Reference -ve for 2 to 10V Output at terminal no.2
- 6 to 9 Not Used


configuration switches

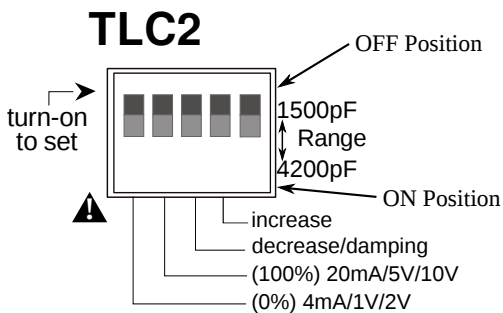

- 1 4mA or 0% calibration switch:
This switch calibrates 0% or 4mA level and it also trims 4.0mA value in association with switch 3 (decrease) and 4 (increase)
- 2 20mA or 100% calibration switch:
This switch calibrates 100% or 20mA level and it also trims 20.0mA value in association with switch 3 (decrease) and 4 (increase)
- 3 Digital Trim (decrease) Switch
- 4 Digital Trim (increase) Switch
Switch#4 also act as diagnostic switch
- 5 Range Switch select for 1500pF to 4200pF
1500pF is required for oil and water up to 2500mm probe. 4200pF is required for water above 2500mm probe

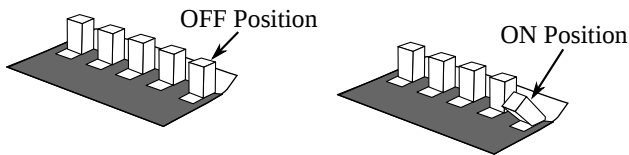

Example of Switch in On and Off Positions

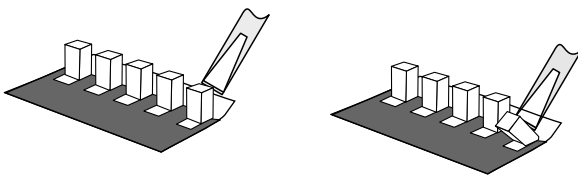

Using small screw-driver tip to turn-ON and OFF

Shown on the left is typical ON and OFF positions of the DIP switches.


Always use a small screw driver to turn ON/OFF the switches using pen and other method may damage the switches.

Annexure-1


Connection Diagrams - TLC2 (EILV/ERLV)

For current output 4-20mA


1. Grounded Load

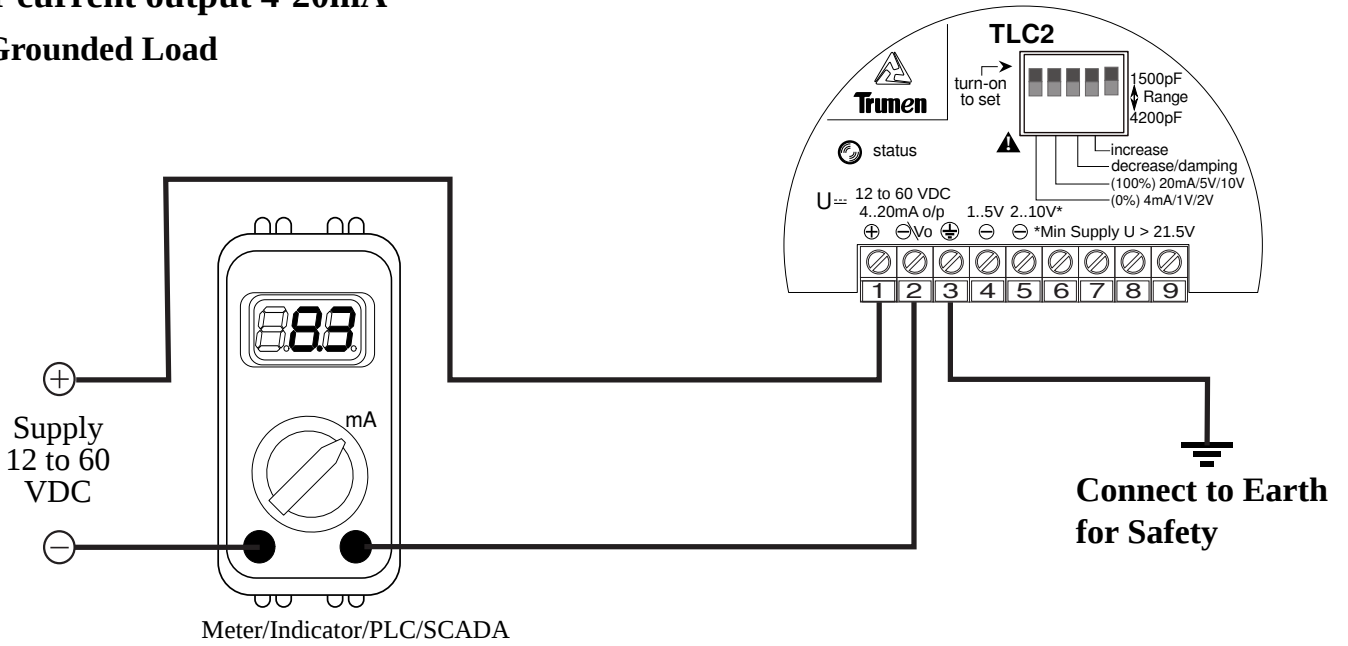

2. Floating Load

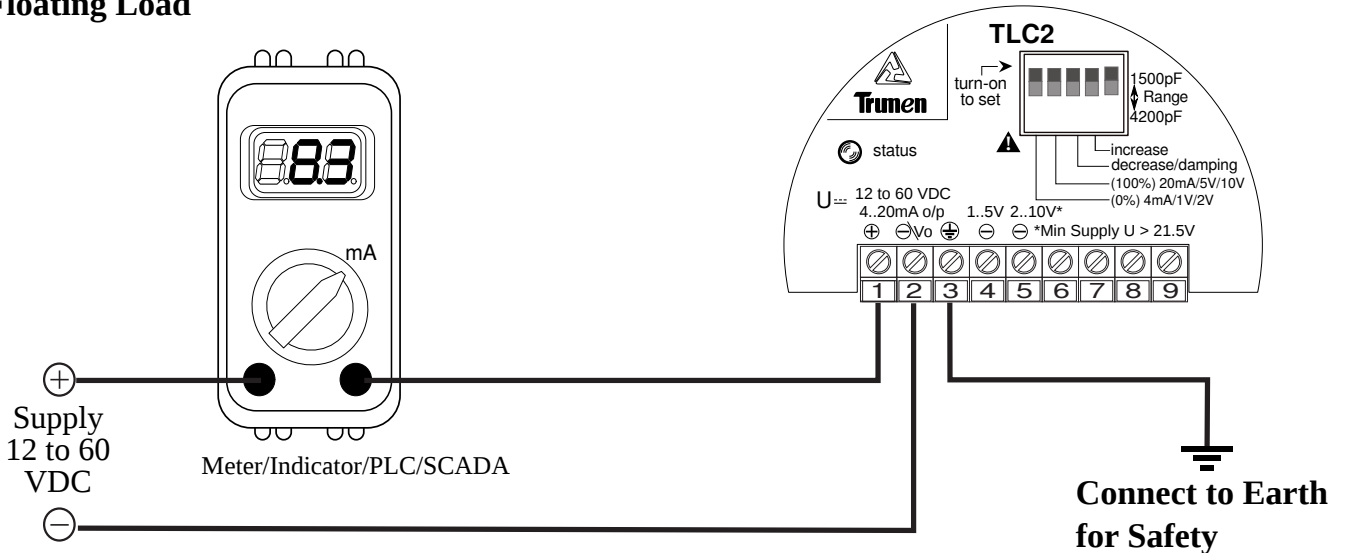

3. Voltage Output with Grounded Load

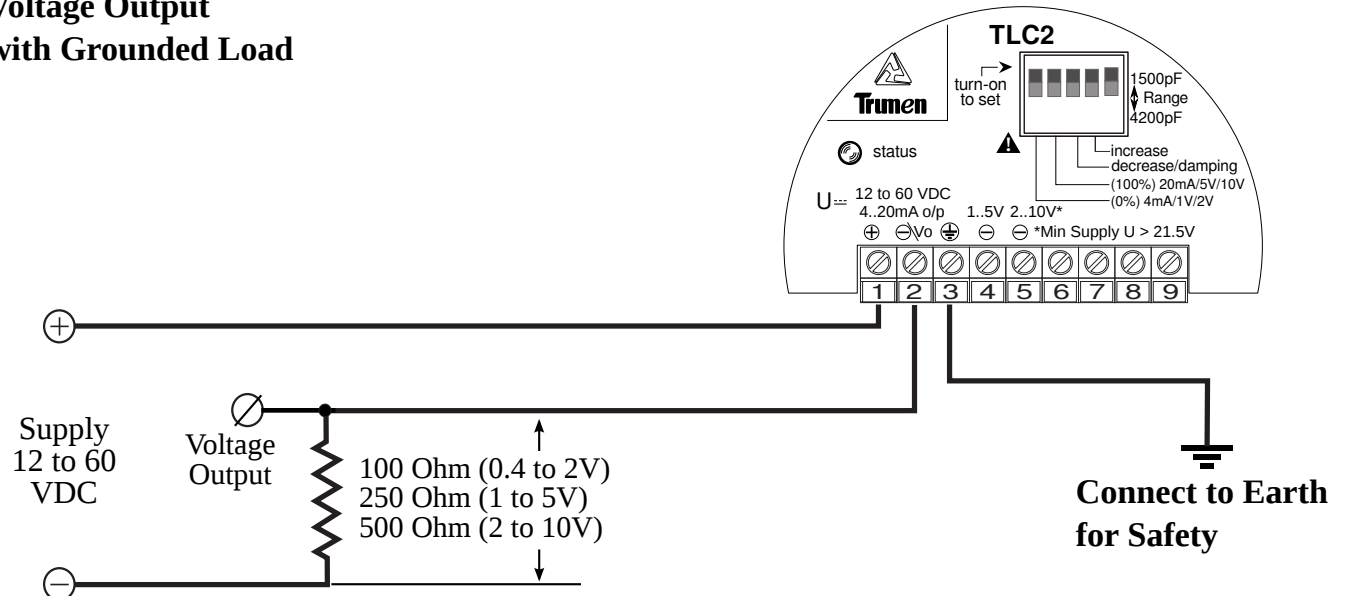


Annexure-1



Calibration - TLC2 (EILV/ERLV)

Full calibration (100% or 20mA Calibration)

Calibrate 20mA for 100% Level


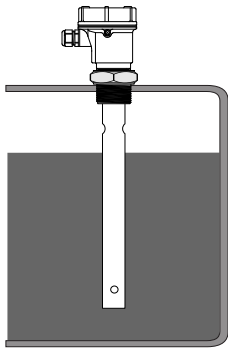


Switches 1, 2, 3 & 4 must be OFF (#5 is as per range). Fill the material up to the desired level

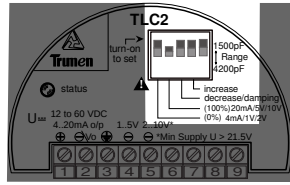


LED must be blinking once per 2 sec (No Error). MilliAmmeter must be connected in series with the device

Turn ON Switch# 2
Make sure that switch 1, 3 & 4 are OFF (as shown above). And switch 5 is as per range

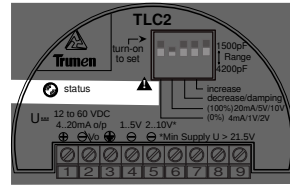


LED will blink faster (not as fast as Error blink) for 5sec. During this time the switch can be put back if accidentally turned ON. Then LED will start blinking three times then off, successively. mA meter will show 4mA

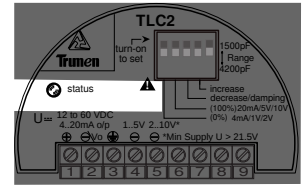


Wait till mA meter shows 20mA. And status LED glows permanently. Turn-off switch# 2, 20mA level or 100% level is calibrated.

Trimming (100% or 20mA)

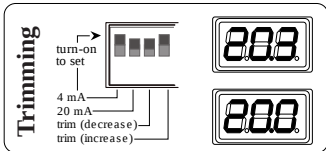

Decrease

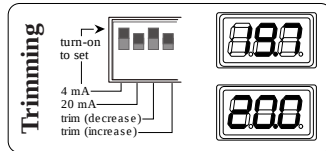


Increase

Trimming can be done. If 20mA reading in milli-ammeter is lesser or more than 20mA. Use the trim-switches (switch# 3 to decrease, say 20.3 mA to 20.0) (switch# 4 to increase, say 19.7 mA to 20.0).



For trimming 100% (20mA)
a) Turn switch 3/4 (decrease/increase) ON
b) Turn 20mA switch ON (this sequence is important). and watch the milli-ammeter till correct trimming of 20mA is done. Immediately
a) Turn switch 3/4 (decrease/increase) OFF
b) Turn 20mA switch OFF (sequentially).

Empty calibration (0% or 4mA Calibration)

Calibrate 4mA for 0% Level


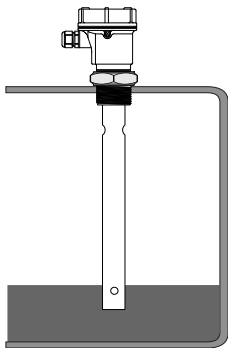


Switches 1, 2, 3 & 4 must be OFF (#5 is as per range). Empty the material to the desired level.

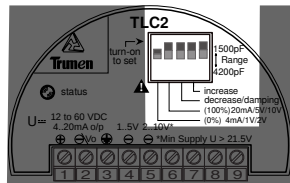


LED must be blinking once per 2 sec (No Error). MilliAmmeter must be connected in series with the device

Turn ON Switch# 1
Make sure that switch 2, 3 & 4 are OFF (as shown above). And switch 5 is as per range

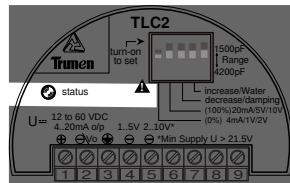


LED will blink faster (not as fast as Error blink) for 5sec. During this time the switch can be put back if accidentally turned ON. Then LED will start blinking three times then off, successively. mA meter will show 20mA

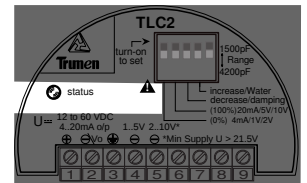


Wait till mA meter shows 4mA. And status LED glows permanently. Turn-off switch# 1, 4mA level or 0% level is calibrated.

Trimming (0% or 4mA)

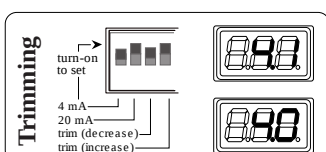

Decrease

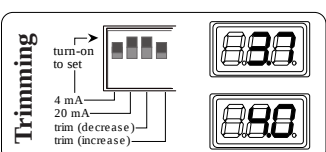

Increase


Trimming can be done. If 4mA reading in milli-ammeter is lesser or more than 4mA. Use the trim-switches (switch# 3 to decrease, say 4.1 mA to 4.0) (switch# 4 to increase, say 3.7 mA to 4.0)

For trimming 0% (4mA)
a) Turn switch 3/4 (decrease/increase) ON
b) Turn 4mA switch ON (this sequence is important). and watch the milli-ammeter till correct trimming of 4mA is done. Immediately
a) Turn switch 3/4 (decrease/increase) OFF
b) Turn 4mA switch OFF (sequentially).

Damping(response time)


1. Turn switch 3 ON (switch no. 1, 2 & 4 should be off)
2. LED will blink rapidly, then it will turn OFF.
3. Once LED is OFF, turn switch 1 ON, LED will turn ON.
4. Turn switch 1 OFF, LED will turn OFF. damping is set to 1 sec.
5. Repeat operation 3 and 4 for as many seconds of damping required, to finish setting, turn all switches OFF.

Operation 1, 2




Turn switch 3 ON

Operation 3



Turn switch 1 ON

Operation 4



Turn switch 1 OFF

Operation 5















Turn all switches OFF

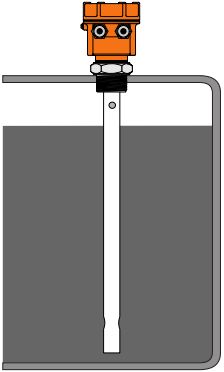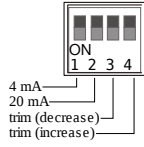Damping=1 sec

Annexure-1

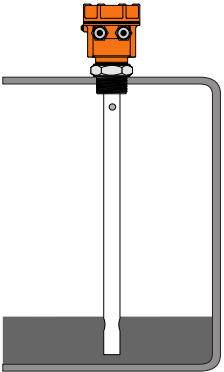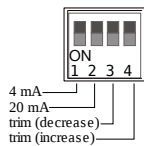Operation Matrix - TLC2 (EILV / ERLV)

This model is best suitable for continuous current level measurement, as well as continuous voltage measurement with option 1 to 5V and 2 to 10 VDC.



Material & Installation	Switching Operation	Calibration Switches	LED Indication	Current Output	Voltage Output 1-5V Option	Voltage Output 2-10V Option
<p>20mA or 100% Level</p> 	<p>When the material in tank is at 100%. All switches are OFF. LED will blink once per 2sec and mA meter will show 20mA/ Voltmeter will show 5.0V/ 10.0V</p>		 <p>LED will blink once per 2sec</p>	 <p>Current meter shows 20mA.</p>	 <p>Volt meter shows 5.0V</p>	 <p>Volt meter shows 10.0V</p>
<p>4mA or 0% Level</p> 	<p>When the material in tank is at 0%. All switches are OFF. LED will blink once per 2sec mA meter will show 4mA / Voltmeter will show 1.0V/2.0V</p>		 <p>LED will blink once per 2sec</p>	 <p>Current meter shows 4.0mA.</p>	 <p>Volt meter shows 1.0V.</p>	 <p>Volt meter shows 2.0V.</p>

Annexure-1

Status LED Indications - TLC2 (EILV / ERLV)

Status LED Indications

1. Blinking once per two seconds : No Error

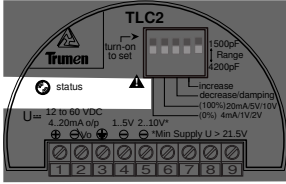

Blinking once per two seconds


Error Indications

2. Blinking rapidly rapidly : Indicating too high capacitance at probe (Error)

Cause: Due to probe is too long for TLC2 in conductive liquid or water.



Blinking rapidly rapidly

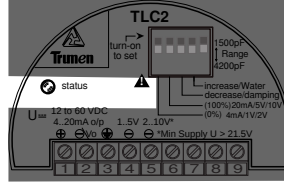


Error indicated by 21mA in loop output




5.25 VDC in 1-5V output



10.5 VDC in 2-10V output

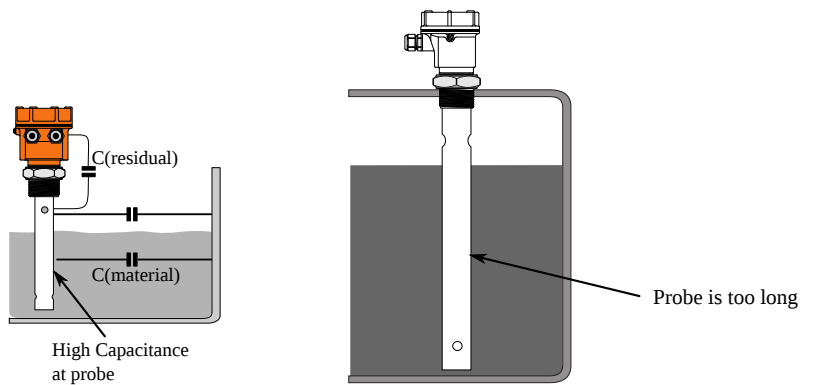

Solution: Change the range from 1500pF to 4200pF using switch# 5

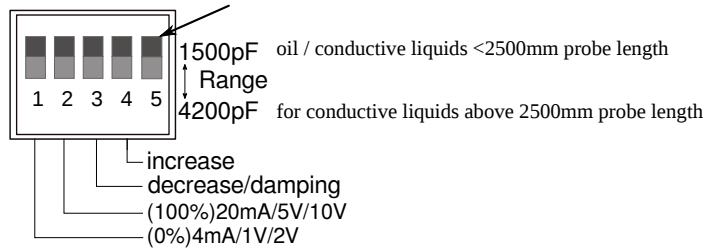

3. Blinking fast continuously: Shorting error (Probe is galvanically short between sense & ground)

Cause: Due to probe insulation failure in conductive liquid.



Blinking fast continuously



Error is indicated by 21.0mA in loop.



5.25 VDC at 1-5V output




10.5 VDC at 2-10V output

Solution: Probe is needed to re-insulate or to be replaced


Annexure-1

Electrical Connections - TLC2 (EILV / ERLV)


electrical connections TLC2

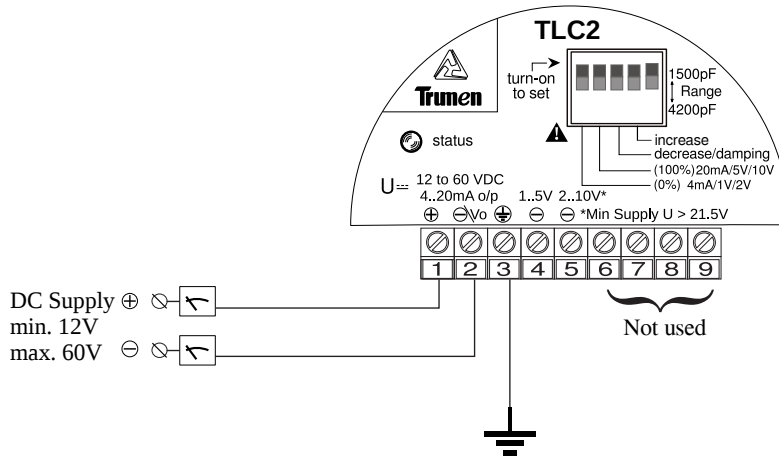

electrical connections TLC2-(1-5V) Voltage Output

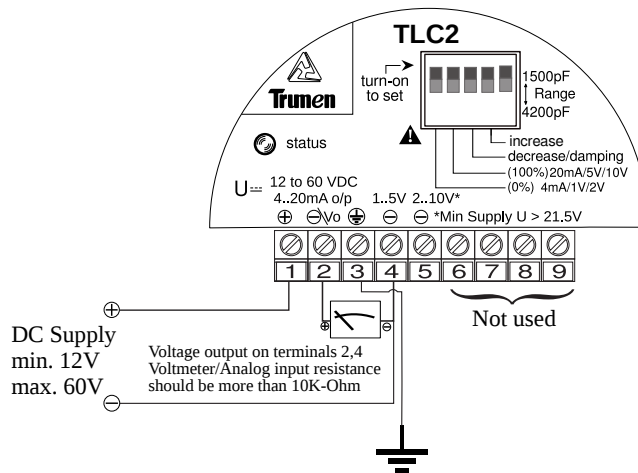

electrical connections TLC2-(2-10V) Voltage Output

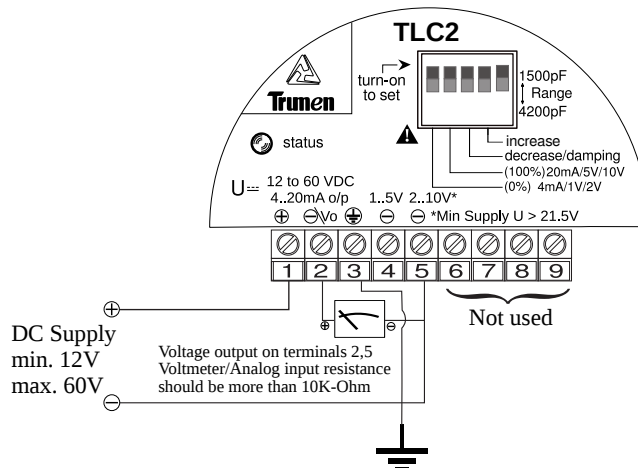

Proper connection to supply earth terminal (3) and the external earth terminal (screw) is must.